



Nexus 5 Speaker Replacement

Replace the speaker assembly on your Nexus 5.

Written By: Chris Willis



INTRODUCTION

Use this guide to replace the speaker assembly on your Nexus 5.



TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Nexus 5 Speaker Assembly](#) (1)
-

Step 1 — Back Cover




- Use a [plastic opening tool](#) to free the clips on the top and each side of the back cover.
- i** The bottom is secured with some adhesive foam. You should be able to finally free the back cover using an [opening pick](#).
- i** It's best to avoid prying around the SIM card slot, as the plastic here is very thin and likely to break from prying.

Step 2 — Speaker



- Remove the four Phillips #00 screws that secure the speaker assembly.

Step 3

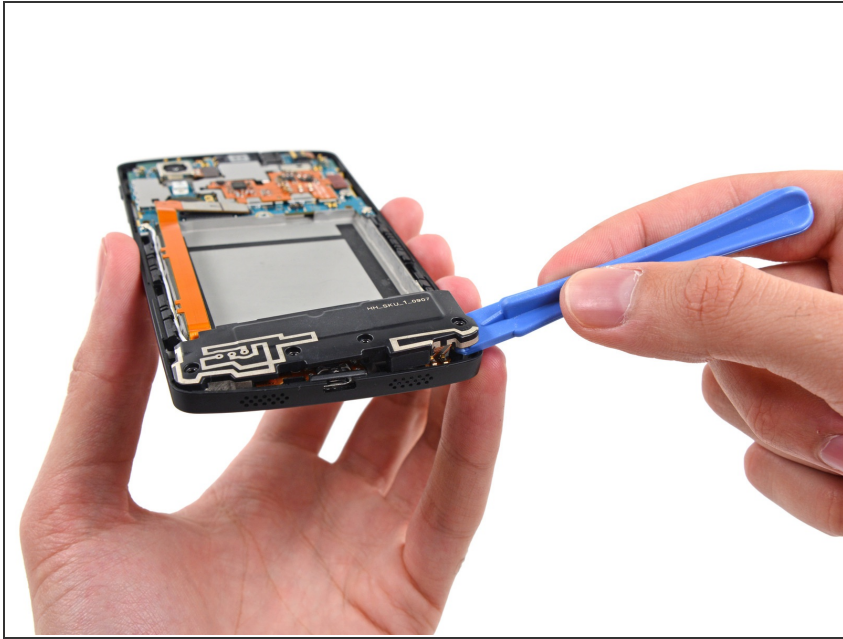

- Use a plastic opening tool to gently pry the speaker assembly out of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 07:33:17 AM.